

CCS Technical Documentation

RH-12/RH-28 Series Transceivers

5 – Disassembly Instructions

[This page left intentionally blank]

Table of Contents

	Page No
Disassembly Procedure	5
Reassembly Procedure	7

[This page left intentionally blank]

Disassembly Procedure


	Remove the B-cover assy.
	Remove the A-cover assy.
	



Remove the Antenna assy.
Use the SRT-6 OPENING TOOL (Part code: 0770431)
when removing the Antenna assy.



Reassembly Procedure

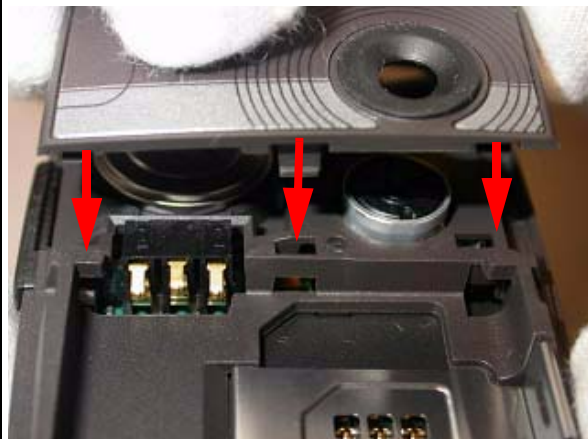

Mount the antenna assy.



Mount the A-cover assy.



Mount the B-cover assy.



Mount the screws.
Use a flathead Torx 6IP 1.8 x 7.4 screwdriver to fasten the screws in the order shown in the diagram.
Torque 30Ncm at 650RPM.